Thermo-Control®

The ultimate wood burning system.

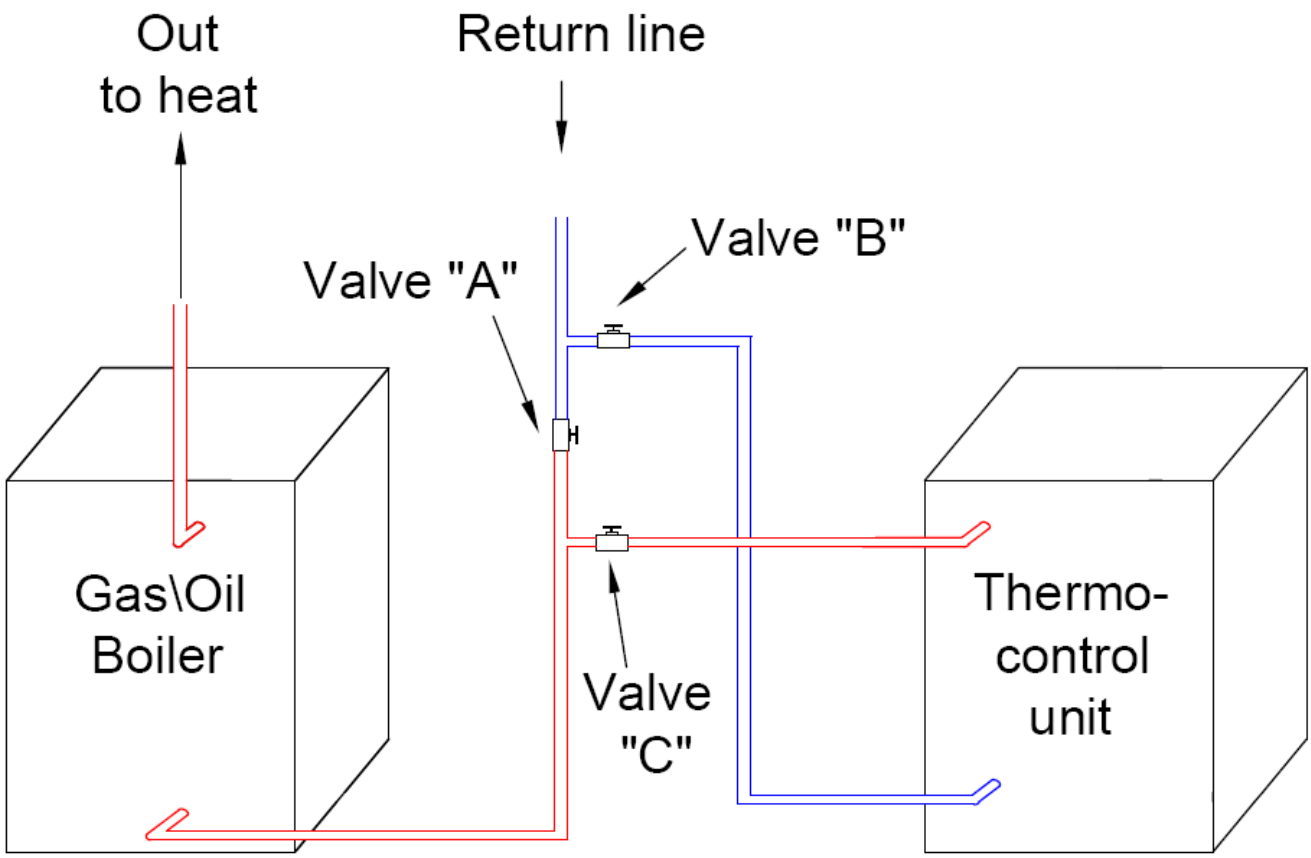

Sample installation - Thermo Control Model 2000, 2500 & 3000 boilers. Add on to existing gas or oil fired boiler.

When operating wood boiler, close valve "A" and open valves "B" & "C". Reverse valve settings when wood boiler is not utilized.

Divert return water to wood boiler where return water will pickup heat and then pass through the existing gas or oil fired boiler. Turn down the aquastat on the oil/gas boiler to a setting of 120 degrees low and 140 degrees high.
Since the wood boiler aquastat temp. is set at 160 low,180 high, the existing boiler then acts as a back-up only.

VERY IMPORTANT - Valves "B" & "C" must be open prior to firing the wood boiler.

NOTE: This is not to be relied on for technical specifications for installations. Please refer to page 16 of our Installation Guide for comprehensive instructions and specifications.

PO Box 640
Cobleskill, NY 12043
www.nationalstoveworks.com
(518) 296-8517