


# Thermo-Control®

The ultimate wood burning system.

## Recommended Installation For Low Water Cutoff

Install directly above large supply fitting outlet on top of boiler using a 3/4" tee and reducing bushing.


Place an automatic air vent immediately above 3/4" tee to ensure no air accumulates near Low water Cutoff thus preventing false reading.

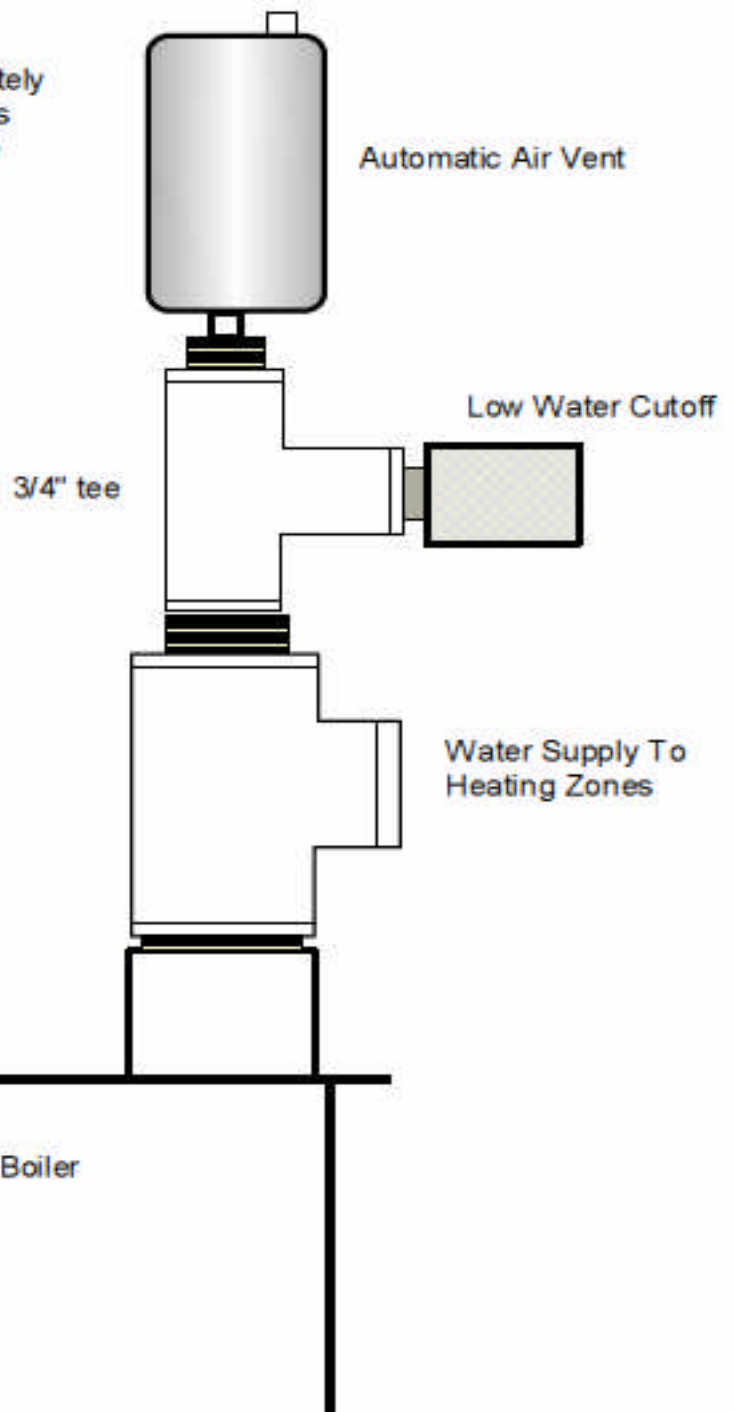

# Thermo-Control®

The ultimate wood burning system.

## Wiring Diagram for Low Water Cutoff

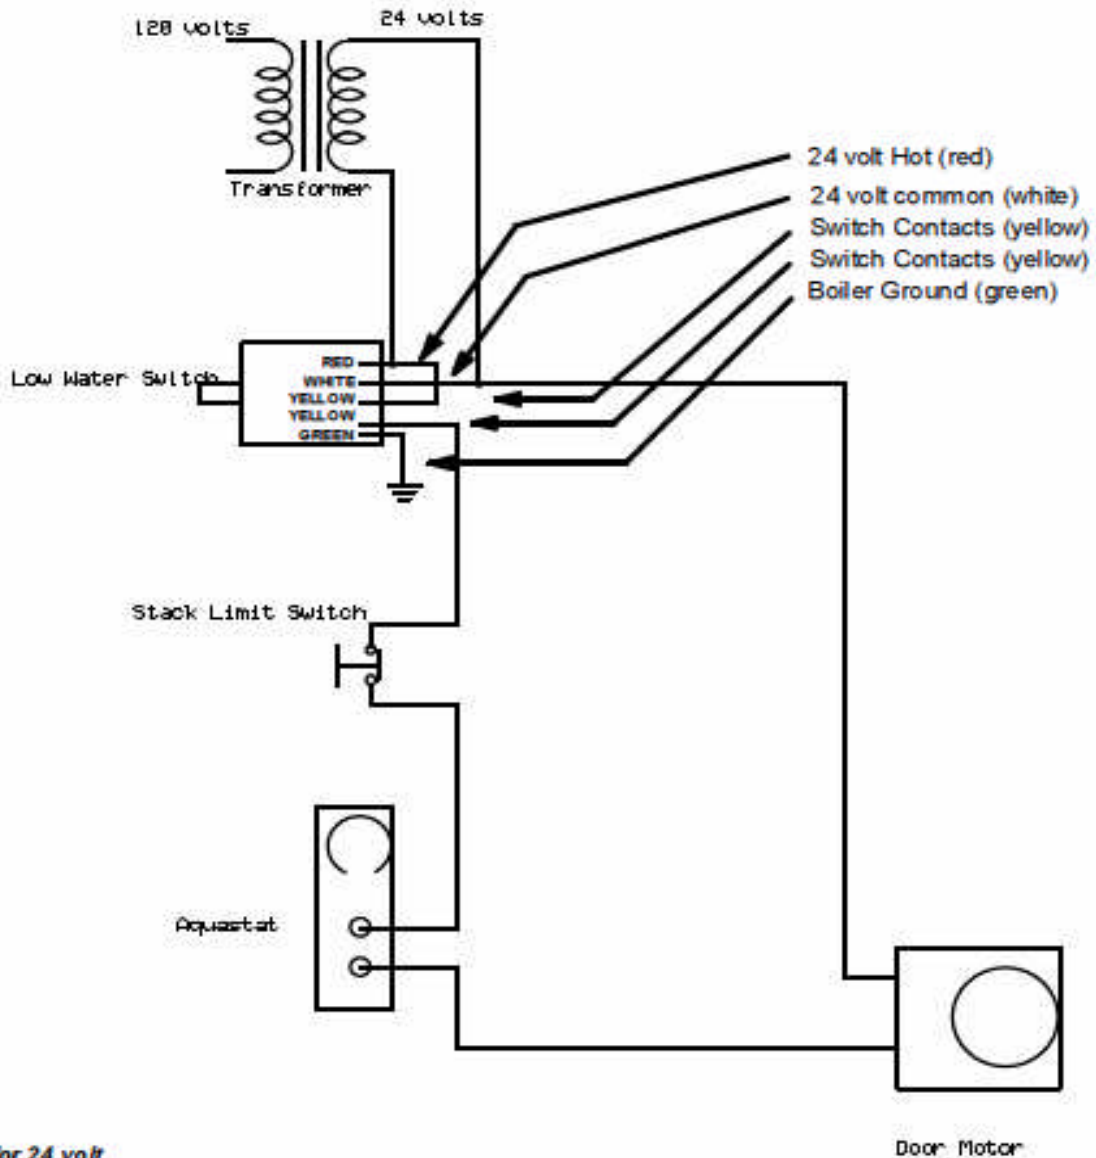

### NOTES:

Wire color for 24 volt transformer and door motor is interchangeable.

Green wire from low water cutoff switch must be connected to a metal component grounded to boiler (e.g. junction box, or clamp screw on aquastat).

Low voltage wiring can be 24 gauge thermostat wire or equivalent.

PO Box 640  
Cobleskill, NY 12043

(518) 296-8517  
[www.thermocontrolheating.com](http://www.thermocontrolheating.com)